



Deck Side Table

Make your own outdoor side tables using rot-resistant PVC deck, they will last season after season.

1 Materials you'll need:

- (2) 2" x 4" pressure treated lumber
- (1) 4" x 4" x 8' Inteplast PVC Corner Board
- (1) 2" x 4" x 8' Inteplast PVC Trim
- (1) 12' Inteplast PVC Deck cut into (5) 20" pieces
- Table saw
- Cordless drill
- Stainless steel screws
- Finish nails.

2 Make your cuts:


- Cut the 2x4 pressure treated wood into (2) 17", (2) 25" and (1) 15" pieces.
- Cut the PVC Corner Board into (4) 18" pieces
- Cut the PVC Deck board into (5) 20" pieces

3 Assemble:

- Use the pieces of pressure treated lumber to build a 17"x25" base frame with a center beam (see diagram)
- Attach the four pieces of PVC corner board at the corners using 2" stainless steel screws to fasten from inside of the wood frame to hide the screw inside.
- Measure and cut four pieces of 1"x4" PVC trim around the outside and nail them between the corner boards
- Place five pieces of PVC deck on top of the table frame using 2" stainless steel screws to fasten.

5 Success!

- You are finished.
Put your table out on your deck and enjoy it for years to come!

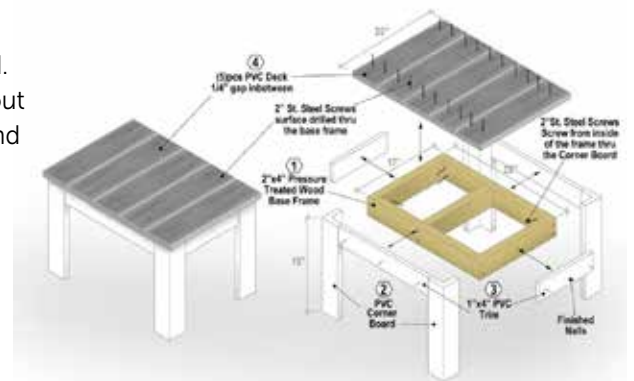

For more fun projects and to view more videos, visit inteplastbuildingproducts.com.

For instructions on how to work with Inteplast products please refer to the Installation Guides at inteplastbuild.com.