



PVC Bottle Cap Catcher

A PVC bottle cap catcher is the perfect accessory for your deck, patio, or outdoor entertaining hot spot.

1 *Materials you'll need:*

- 1 x 6 PVC trim (3 linear feet) / actual thickness: 3/4" actual width: 5-1/2"
- Wall mounted bottle opener
- Miter saw
- Tape measure
- Pencil and eraser
- 12 screws. I used Grip Rite 1-5/8" stainless steel trim screws
- 2 corner clamps
- Clear PVC cement
- Power drill
- Rafter square
- Clamp

2




2 *Making the cuts:*

- Cut 15" off of the 1 x 6 PVC trim board.



- Next, miter at 45 degrees of one corner then you will need to mark where the cap opener will need to be installed. The hole to hold up the opener is 1-1/4" from the top and the cap opener is 1" away from the center of the top hole.

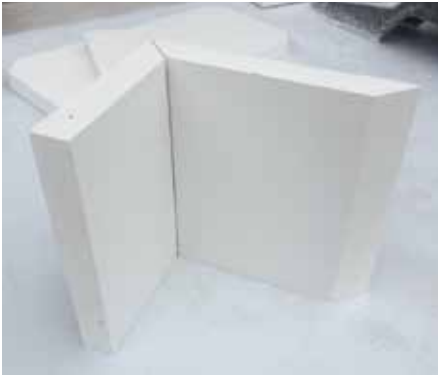

- In this next step, you will need to cut the cap catcher piece. You will need to cut off from the 1 x 6 plank: (2) 4" pieces for the sides of the catcher, (1) 5-1/2" piece for the front of the catcher. The corners of the front piece will need to be beveled at 45 degrees for a tight miter joint.

- Next you will need to cut the bottom piece of the catcher which is 4" x 3-1/4" then drill three holes for drainage (centered). After that, use the two corner clamps to bring the catcher together then use the clamp hold the bottom piece while you fasten the stainless trim screws into the holder.

3



3 Assemble:

- To bring this project together, attach the holder. Apply PVC cement to the holder then use the clamp to secure the catcher to the base. Wait a few minutes while the catcher is bonding to the base then use the stainless steel screws to secure the piece together.
- Attach the cap opener.



6 Success!

- And you've got your finished product. Sit back with a cold one and enjoy!

For more fun projects and to view more videos, visit inteplastbuildingproducts.com.

For instructions on how to work with Inteplast products please refer to the Installation Guides at inteplastbuild.com